
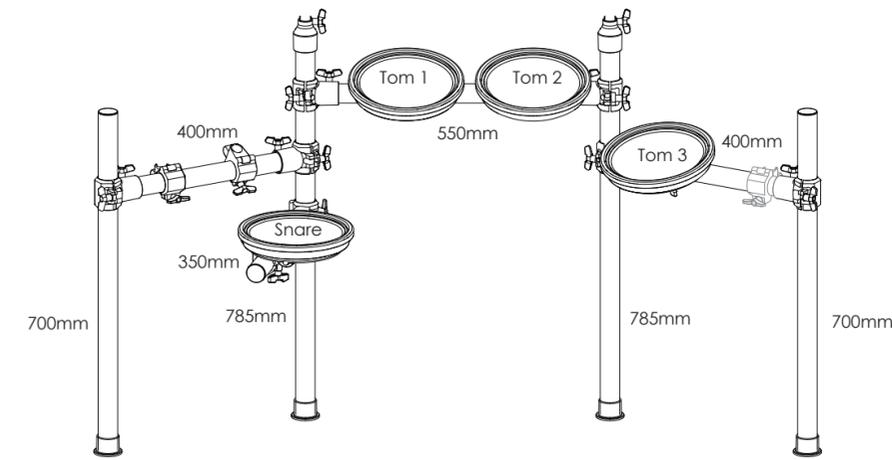




1. Assemble the Stand and Pad

HAMPBACK

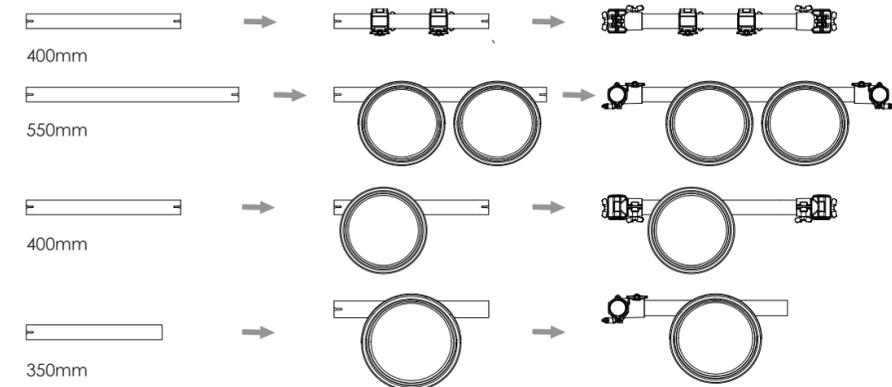

• According to above figure, to assemble the stand and pad in turn.



2. Assemble the Cymbal Mounts

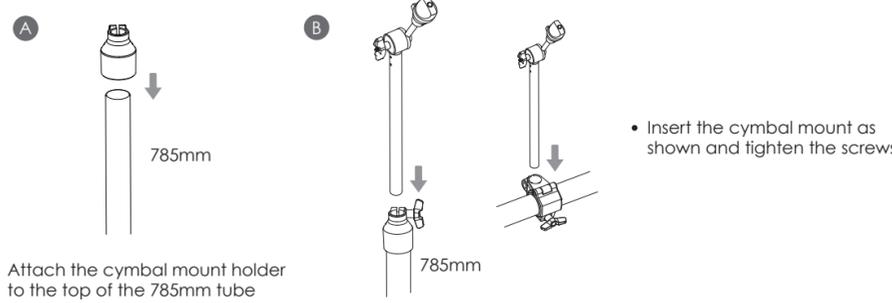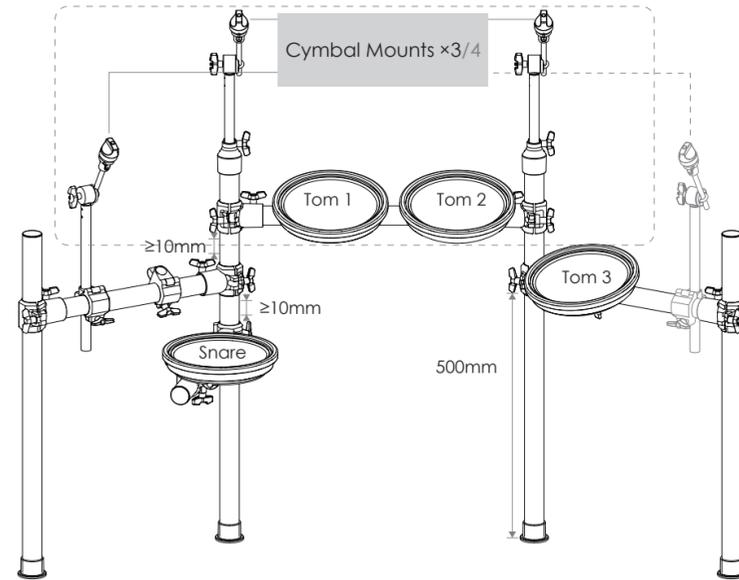


• Attach the cymbal mount holder to the top of the 785mm tube

• Insert the cymbal mount as shown and tighten the screws

3. Attach the Cymbals

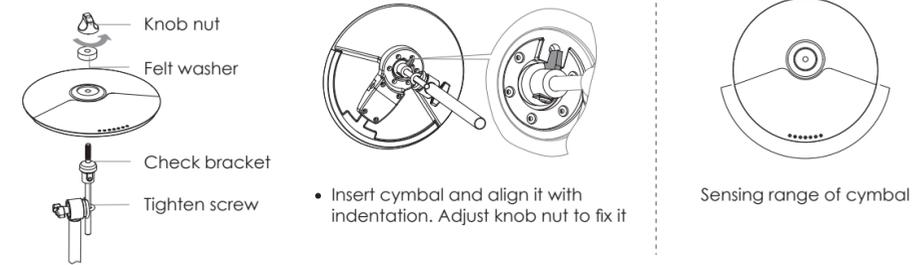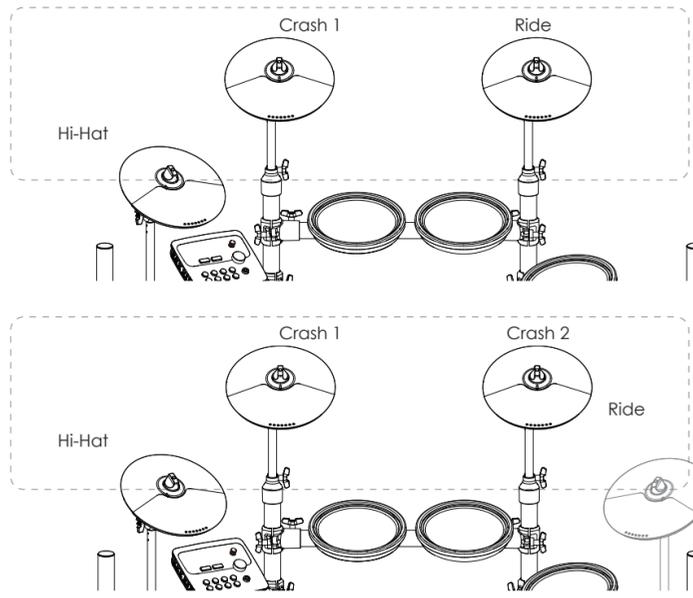


• Insert cymbal and align it with indentation. Adjust knob nut to fix it

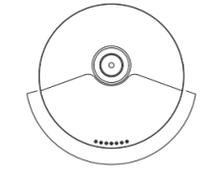



Sensing range of cymbal

4-A. Attach the Pedals

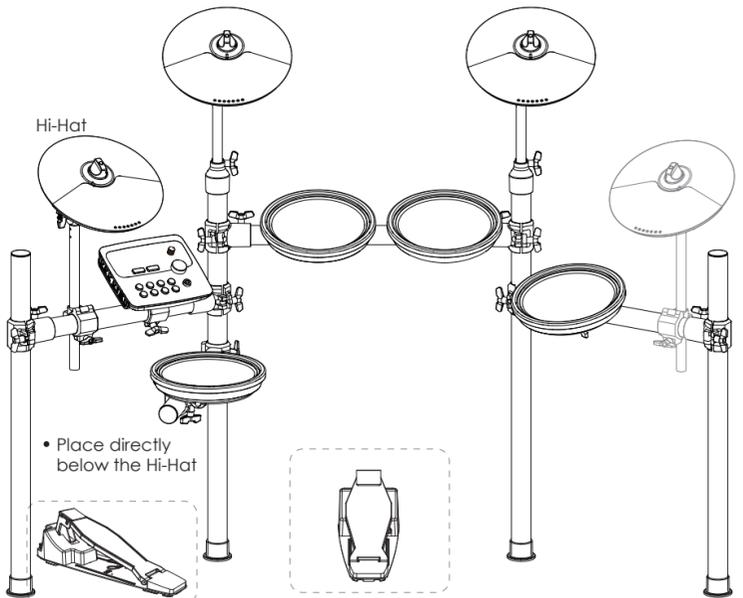

• Place directly below the Hi-Hat

4-B. Attach the Kick Pedal

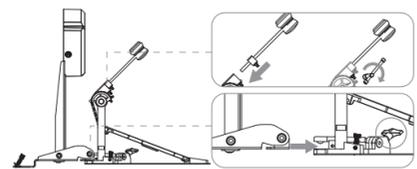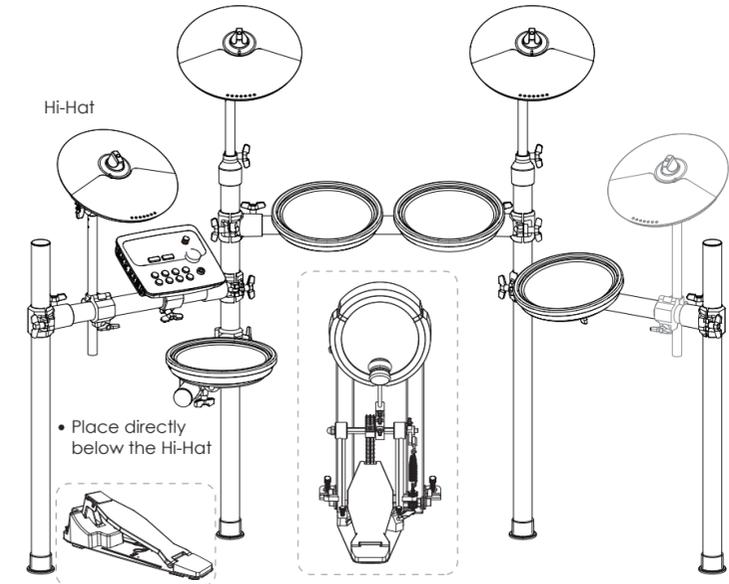


- Install the beater into the holder securely by fixing the screw
- Install the kick pedal securely



On the blanket





On the floor

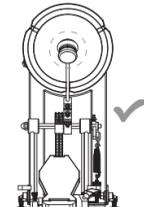


Position beater at the center of kick drum

5. Attach the Sound Module

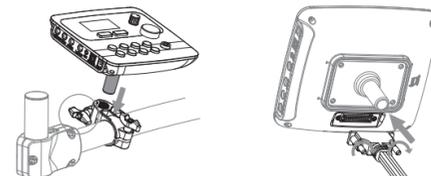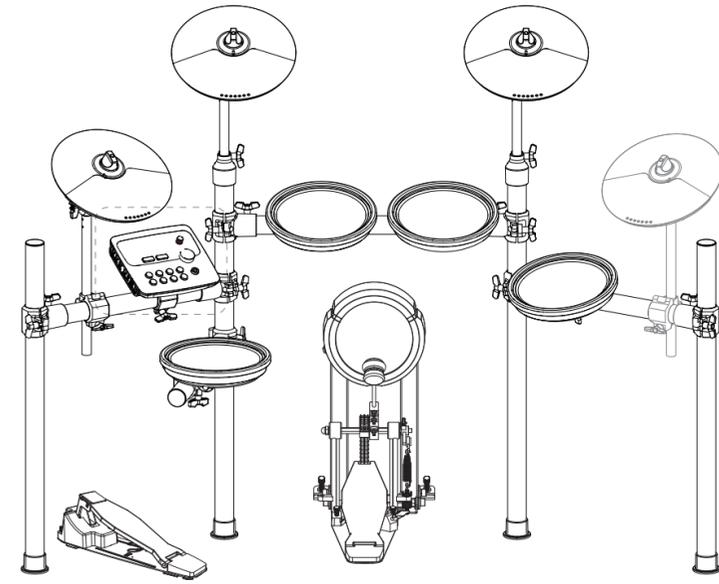

- Insert sound module, adjust wing knob to fix it and connect audio cable

6. Power Connection & Wiring

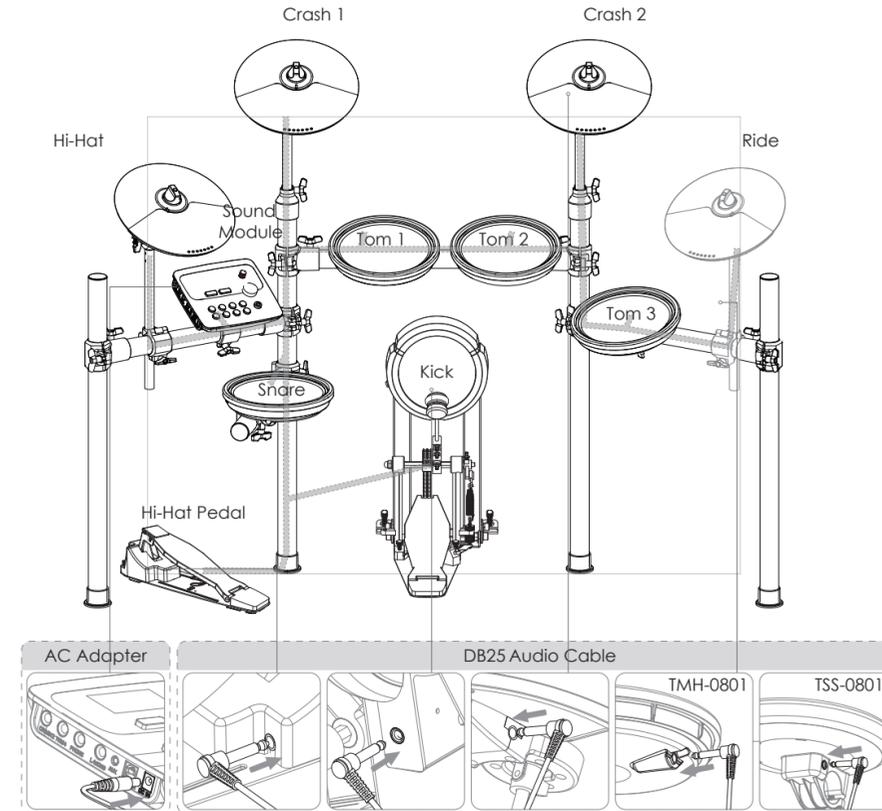

- To connect the jacks as shown in the figure, and using cable clip to organize the cables

7. Getting Ready to Play

Pads: (Snare, Tom 1/2/3)

TMH-0801



Head shot




Rim shot

TSS-0801



Head shot

Cymbals: (Hi-Hat, Crash, Ride)

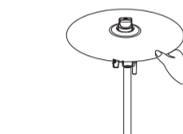

Edge sensor




Bow shot

Hi-Hat Control Pedal



Open Hi-Hat Half-open Hi-Hat Closed Hi-Hat

Adjust the beater

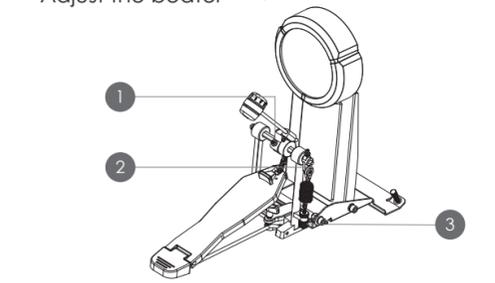

Adjust the center of gravity of beater

Adjust the gradient of beater



Adjust the tightness of spring