




# HAMPBACK


Technology speed up the spread of music

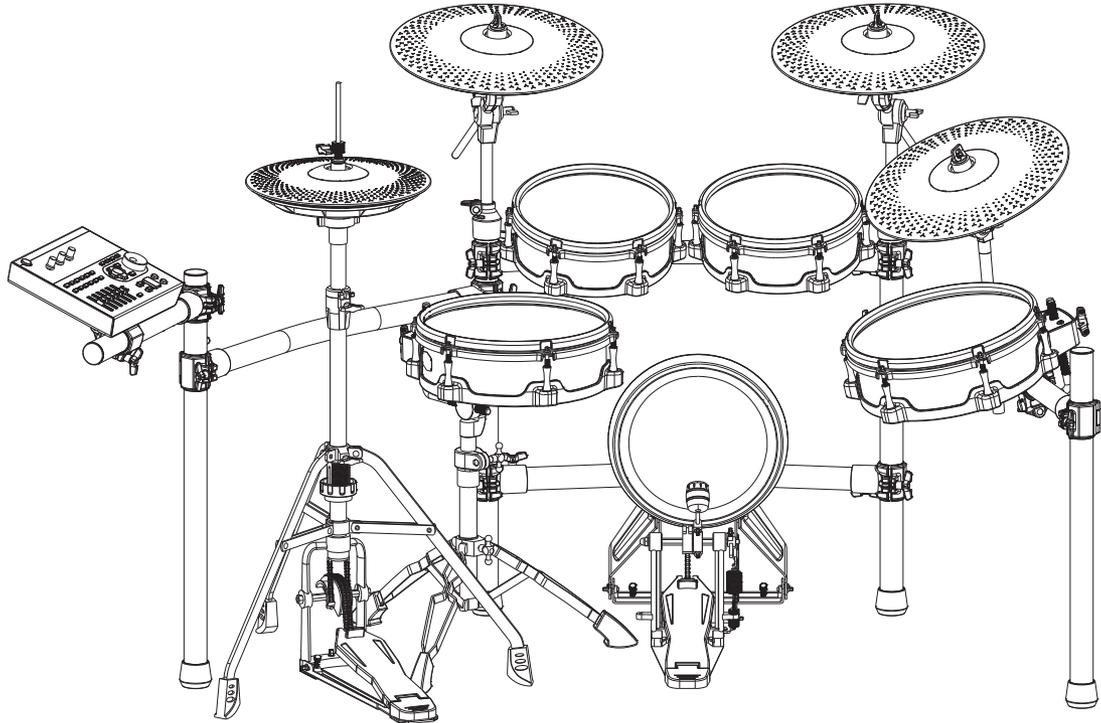


Installation Instruction  
for ACE-Short Drum Cavity Series




# 1.Assemble the stand

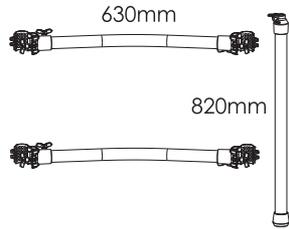


1 Middle bend + one side 820mm straight pipe

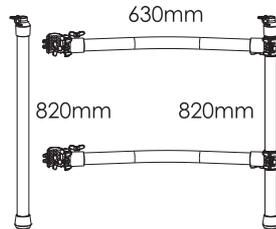


2 Install the other 820mm straight pipe

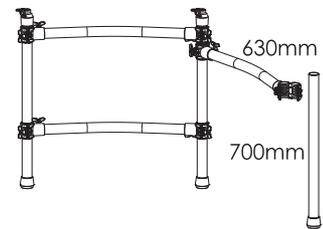


3 630mm bend pipe + 700mm straight pipe on the right

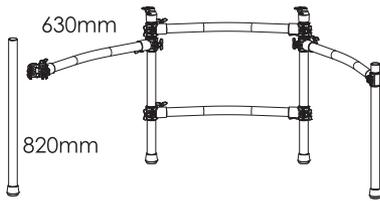


4 630mm bend pipe + 820mm straight pipe on the left

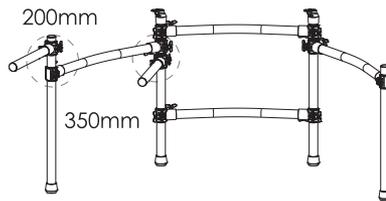


5 Install 350mm straight pipe and 200mm straight pipe

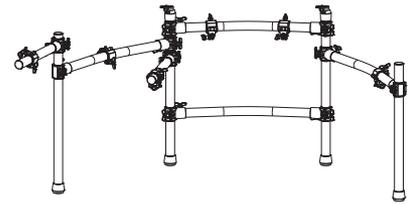


6 -A Apply to 3 cymbals

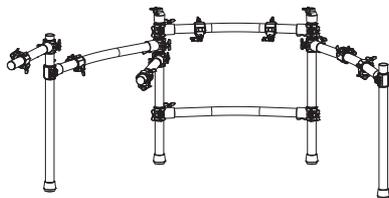

6 -B Apply to 4 cymbals

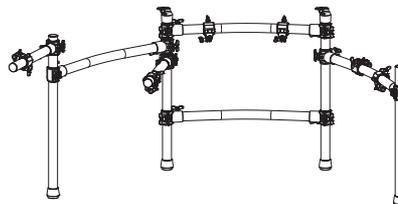


6 -C 4 cymbals and Hi-Hat

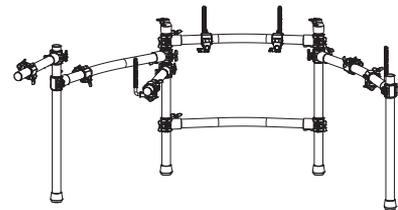


7 Pad Mount Holder


• According to above figure, to assemble the stand and pad in turn

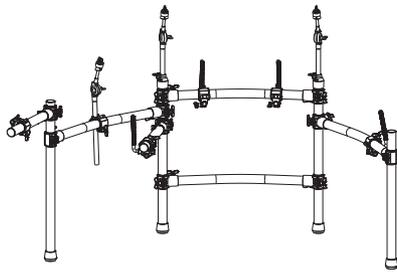

8 -A Apply to 3 cymbals

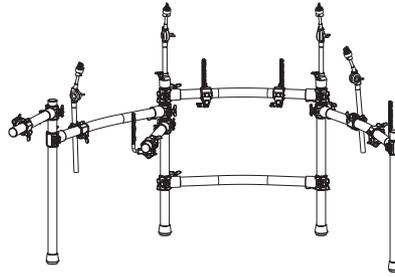

8 -B Apply to 4 cymbals

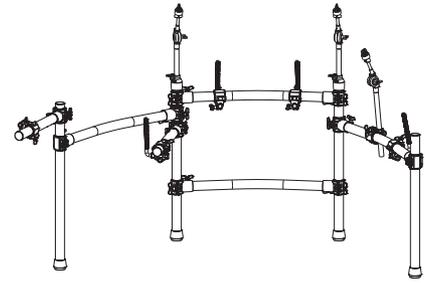


8 -C 4 cymbals and Hi-Hat





- Expand the stand according to the arrow
- According to above figure, to assemble the stand and pad in turn

## 2.Assemble the pad

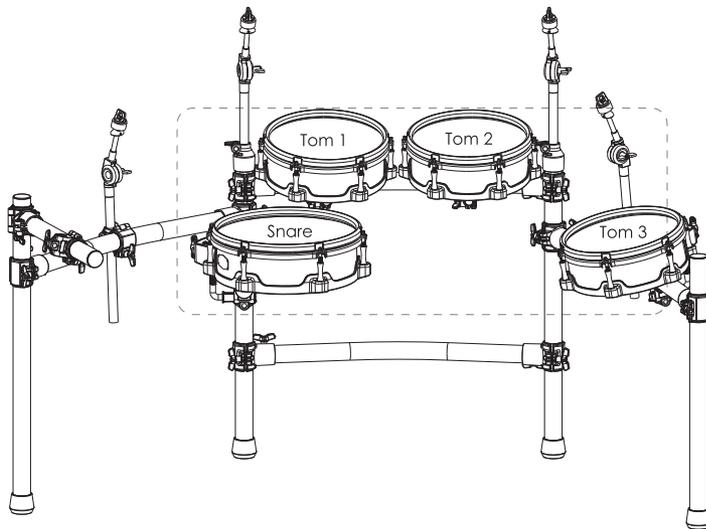


- Insert pad mount and tighten the wing nut


### 3-A . Attach the cymbals

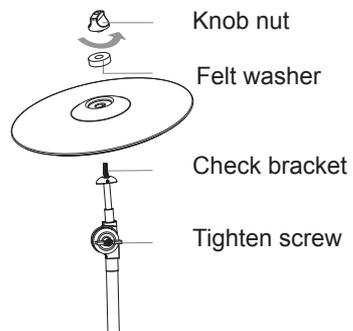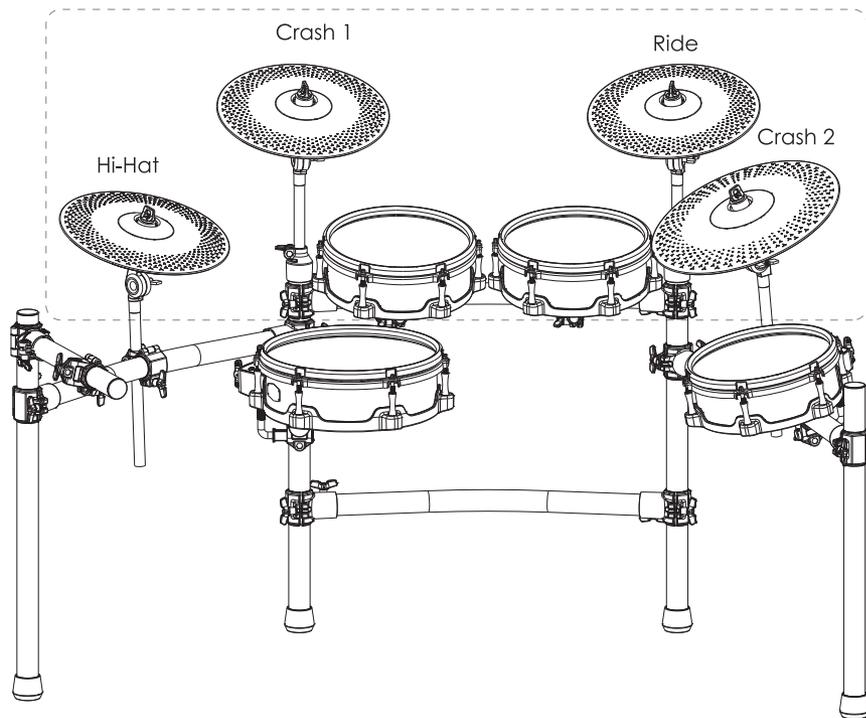


### 3.-B Install the Hi-Hat stand

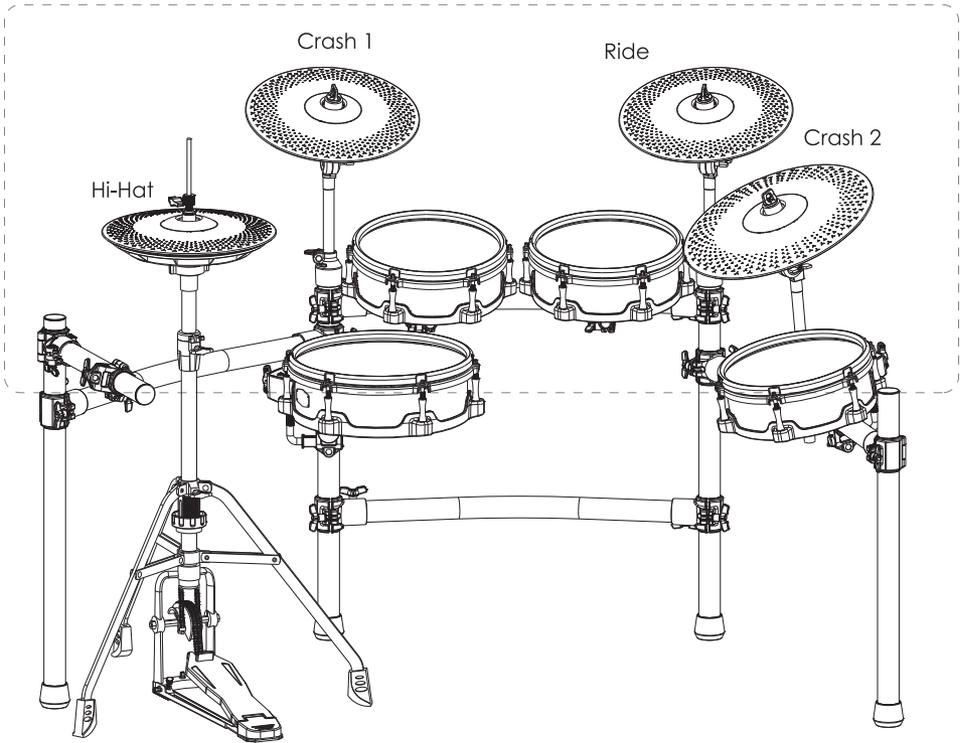


1 The screw should be the same side of the hole

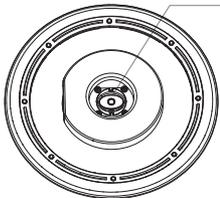


2

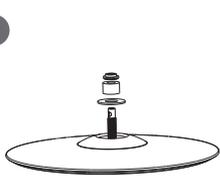


3 The screw should be the same side of the hole

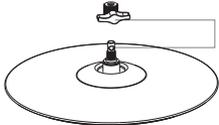

4

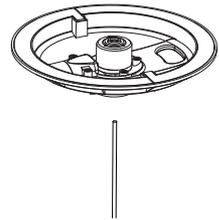


## 4. Attach the Sound Module

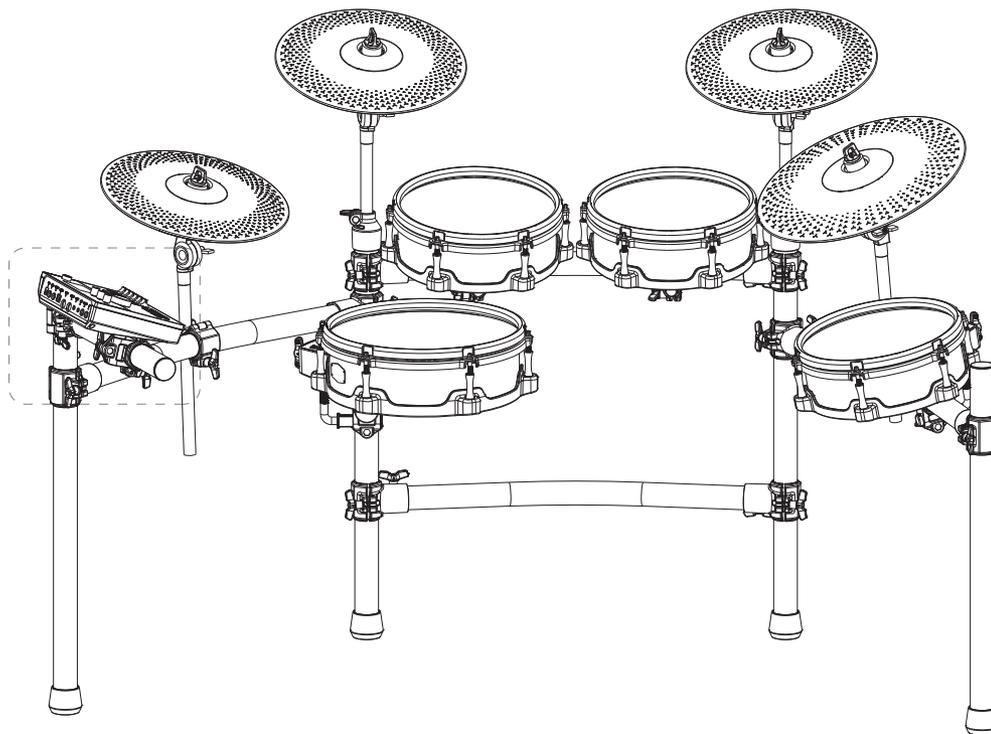

1





2

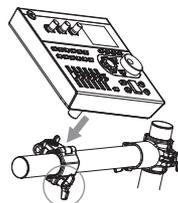

- connect DB25 Audio cable and fix it.
- insert sound module and adjust wing knob to fix it

## 5. Attach the Kick Pedal

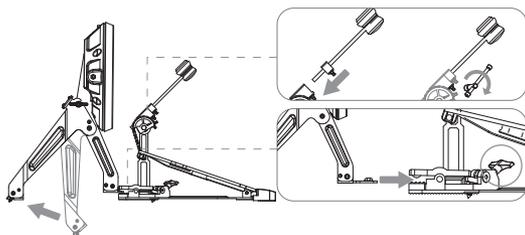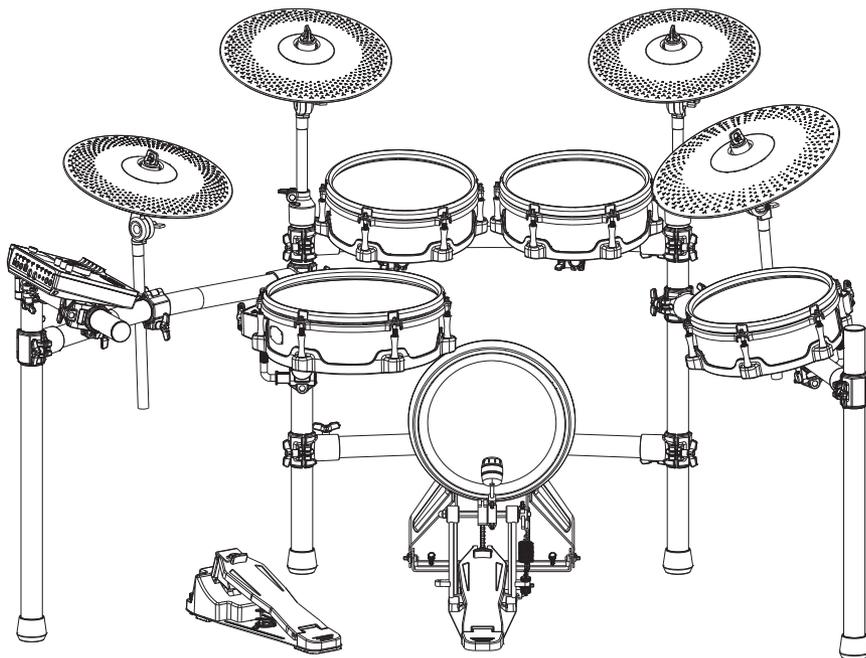


- Open the kick drum stand entirely and lock the screw at sides
- Install the beater into the holder securely by fixing the screw
- Install the kick pedal securely



On the blanket




On the floor

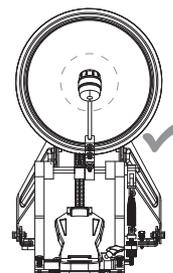

Position beater at the center of kick drum

## 6. Power Connection & Wiring

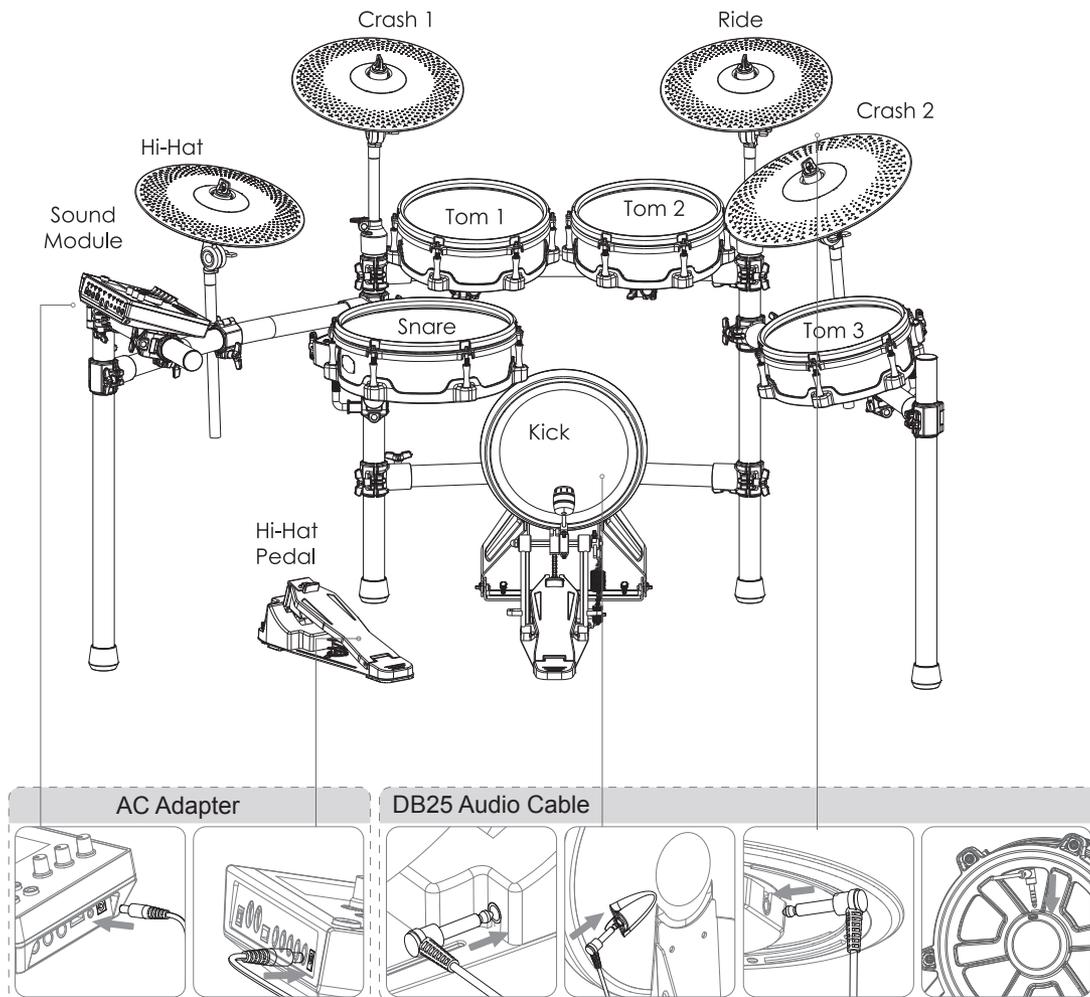


- To connect the jacks as shown in the figure, and using cable clip to organize the cables

## 7. Power Connection & Wiring

Pads: (Snare, Tom 1/2/3)



Head shot

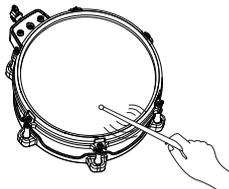


Rim shot


Cymbals: (Hi-Hat, Crash, Ride)




Edge sensor

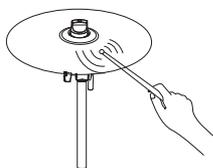

Bow shot

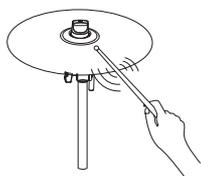

Edge shot

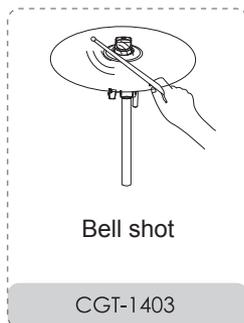

Bell shot

CGT-1403

Pedal



Open Hi-Hat





Half-open Hi-Hat




Closed Hi-Hat

Adjust the beater

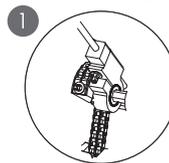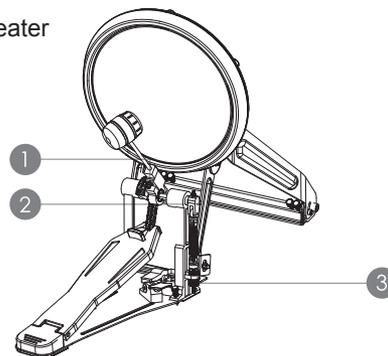

Adjust the center of gravity of beater

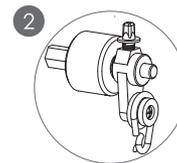


Adjust the gradient of beater




Adjust the tightness of spring


Complete the installation according to the installation guide of the model you purchased

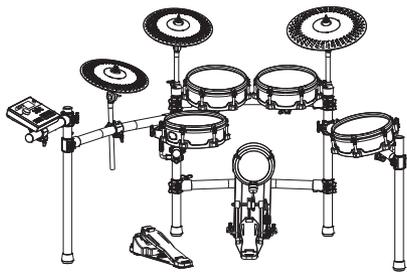


ACE-500

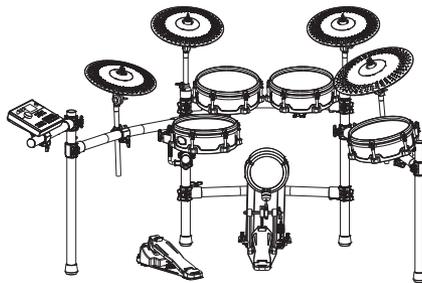


ACE-510

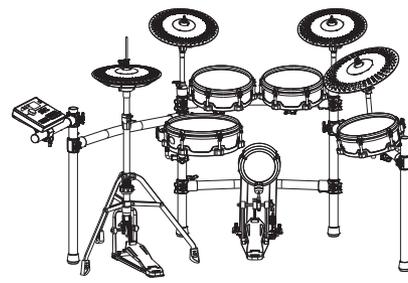

ACE-530

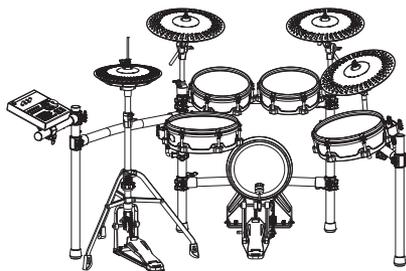

ACE-730

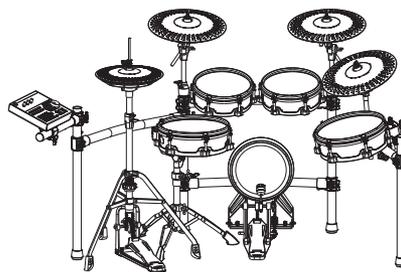

ACE-750